






















Original	Sustituto	Original	Sustituto
 Power	 Power	 Vol-	 Vol-
 1	 1	 OK	 OK
 2	 2	 Down	 Down
 3	 3	 P-	 CH- / Page-
 4	 4	 i	 Info / Angle
 5	 5	 Format / Picture	 Picture / Format
 6	 6	 TXT	 Text / Goto
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 Red/AKT	 Red / Netflix / Search
 9	 9	 Green/Timer	 Sleep / Timer
 0/AV	 AV / Input / RDS	 Green/Timer	 Green / APP / Repeat
 0/AV	 0	 Yellow/[ I ]	 Yellow / YouTube / Repeat
 Up	 Up	 Blue/[++ ]	 Blue / Prime Video / Random
 P+	 CH+ / Page+	 -O	 << / Tune-
 Right	 Right	 O+	 >> / Tune+
 Vol+	 Vol+	 -*	 I<< / Preset-
 Left	 Left	 *+	 >>I / Preset+

















 

 







Original	Sustituto	Original	Sustituto
PIP	Setup / OPT /		
IDTV-?	Smart / List		
P/C-ATS	Display / Media		
AUX	Shift + 7		
























































 



 








Original	Sustituto	Original	Sustituto
	Power		Power
	P+		CH+ / Page+
	P-		CH- / Page-
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<		Left
	>		Right
	<<		<< / Tune-
	>>		>> / Tune+







Original	Sustituto	Original	Sustituto
 Power	 Power	 Vol-	 Vol-
 1	 1	 OK	 OK
 2	 2	 P-	 CH- / Page-
 3	 3	 Down	 Down
 4	 4	 i	 Info / Angle
 5	 5	 Format / Picture	 Picture / Format
 6	 6	 TXT	 Text / Goto
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 Red/AKT	 Red / Netflix / Search
 9	 9	 Green/Timer	 Green / APP / Repeat
 0/AV	 AV / Input / RDS	 Green/Timer	 Sleep / Timer
 0/AV	 0	 Yellow/[ I ]	 Yellow / YouTube / Repeat
 P+	 CH+ / Page+	 Blue/[++]	 Blue / Prime Video / Random
 Up	 Up	 -O	 << / Tune-
 Right	 Right	 O+	 >> / Tune+
 Vol+	 Vol+	 -*	 I<< / Preset-
 Left	 Left	 *+	 >>I / Preset+





Original	Sustituto	Original	Sustituto
	PIP		Setup / OPT /
	IDTV-?		Smart / List
	P/C-ATS		Display / Media
	AUX	 + 	Shift + 7

