













 



















 

 





 

 


 




Original	Sustituto
 Power	 Power
 Drive Select	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 CH/Page+	 CH+ / Page+
 Last View	 Fav / Marker / PC
 CH/Page-	 CH- / Page-
 Radio/Tv	 TV/Radio /
 Internet	 Smart / List

Original	Sustituto
 Skype	 Shift + Smart / List
 I<< Skip	 I<< / Preset-
 Skip >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 << / Tune-	 << / Tune-
 Option	 Shift + Setup / OPT / Tools
 >> / Tune+	 >> / Tune+
 Pause / Step / Freeze	 Pause / Step / Freeze
 Return	 Back / Return
 Info / Angle	 Info / Angle
 Exit / Cancel / Clear	 Exit / Cancel / Clear
 Guide / EPG / -/-	 Guide / EPG / -/-
 Up	 Up
 Pop-Up menu/Direct	 D.Menu / Top
 Down	 Down
 Right	 Right



