



Original	Sustituto	Original	Sustituto
Guide	Guide / EPG / -/--		Play
Power	Power		Pause
Eject	Eject / Surround		<< / Tune-
Tv/Radio	TV/Radio /		>> / Tune+
Red/Goto	Red / Netflix / Search		D.Setup
Green/Angle	Green / APP / Repeat		Rec
Yellow/Repeat	Yellow / YouTube / Repeat		Stop / Hold
Blue/A-B	Blue / Prime Video / Random		I<< / Preset-
FAV	Fav / Marker / PC		>>I/Index
Text	Text / Goto		Menu / Home
Freeze/Hold	Shift + Pause / Step /		Lang/Audio
D.Menu	D.Menu / Top		Up
Subtitle	Subtitle / EQ		Left
Zoom/Size	Zoom / Size		OK
Aspect	Shift + Picture / Format		Right
Subpage	Info / Angle		Sleep
Media	Shift + Display / Media		Down

Original	Sustituto	Original	Sustituto
	Play / Slow		TV
	Pause / Step / Freeze		DVD
	<< / Tune-		SAT
	>> / Tune+		AUX
	Setup / OPT /		SLOW STEP-FREEZE HOLD REC MODE
	Rec / Rec Mode		TUNE- TUNE+ PRESET- PRESET+
	Stop / Hold		TITLE LANG I/II EQ SURROUND
	I<< / Preset-		SOUND AUDIO SUBTITLE
	>>I / Preset+		FORMAT SIZE TIMER PROGRAM
	Menu / Home		PICTURE ZOOM SLEEP TV RADIO
	Lang / Lang I/II		TOP MENU OPT-TOOLS GOTO RDS
	Up		D.MENU SETUP TEXT AV INPUT
	Left		HOME ANGLE
	OK		MENU
	Right		CLEAR EXIT CANCEL
	Sleep / Timer		LIST
	Down		SMART MEDIA CH PAGE
			VOL
			TV DVD CD-STB
			1 2 3
			VIDEO TAPE TUNER
			4 5 6
			AUX-HDD USB BLUETOOTH
			7 8 9
			GUIDE EPG 0 FAV MARKER
			NETFLIX APP YouTube Prime Video
			SEARCH REPEAT REPEAT A-B RANDOM



