



 






 

 
















 







Original	Sustituto
 Standby	 Power
 Tv/Radio	 TV/R
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Goto	 Smart
 Favourite	 Pre Ch
 Menu	 Menu
 Info	 Info

Original	Sustituto
 Recall	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 EPG	 Guide
 Subtitle	 Subt
 Audio	 Dual
 TTX	 Text
 <<	 <<
 >>	 >>





Original	Sustituto	Original	Sustituto
	<<		<<
	>>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	Repeat	+	Shift + Text
	Page+	+	Shift + Ch +
	Page-	+	Shift + Ch -
	PVR		Media
	Red/USB		Red
	Green/V-Format		Green
	Yellow/Aspect		Yellow
	Blue/Timer		Blue

Original	Sustituto

