








Original	Sustituto
Power	Power
Tv Power	Shift + Power
Open/Close	Eject / Surround
Tv Mute	Shift + Mute / Dimmer
AV/Input Tv	AV / Input / RDS
1	1
2	2
3	3
PR/CH+ Tv	Shift + CH+ /
4	4
5	5
6	6
PR/CH- Tv	Shift + CH- /
7	7
8	8
9	9
Vol+ Tv	Vol+

Original	Sustituto
Clear	Shift + Exit / Cancel / Clear
0	0
Recall/Repeat/Tv/ Radio	TV/Radio /
Vol- Tv	Vol-
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
I>>	I>> / Preset+
Pause/Time Shift	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Home	Menu / Home
Up	Up
Info/Menu	Info / Angle
Left	Left
Enter	OK
Right	Right





Original	Sustituto
 Back	 Back / Return
 Down	 Down
 Disc Menu/Rec	 D.Menu / Top
 Guide	 Guide / EPG / -/--
 PR-	 CH- / Page-
 PR+	 CH+ / Page+
 PR List	 Smart / List
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Exit	 Exit / Cancel / Clear
 Subtitle	 Subtitle / EQ
 Text	 Text / Goto
 Mute	 Mute / Dimmer
 Rec	 Rec / Rec Mode
 Timer Rec	 Shift + Rec / Rec Mode

Original	Sustituto
 Title/Popup	 Setup / OPT /

