



 







 

 
 

 


















 



 



 



 



 

 

 















Original	Sustituto	Original	Sustituto
 Power	 Power	 Up	 Up
 EPG	 Guide / EPG / -/--	 Display	 Display / Media
 REP	 TV/Radio /	 Left	 Left
 Mute	 Mute / Dimmer	 OK	 OK
 Rec List	 Shift + Rec / Rec Mode	 Right	 Right
 CH List	 Smart / List	 Menu	 Menu / Home
 Subtitle	 Subtitle / EQ	 Down	 Down
 Eject	 Eject / Surround	 Exit	 Exit / Cancel / Clear
 Rec	 Rec / Rec Mode	 1	 1
 Stop	 Stop / Hold	 2	 2
 I<<	 I<< / Preset-	 3	 3
 >>I	 >>I / Preset+	 4	 4
 Pause	 Pause / Step / Freeze	 5	 5
 Play	 Play / Slow	 6	 6
 <<	 << / Tune-	 7	 7
 >>	 >> / Tune+	 8	 8
 Source	 AV / Input / RDS	 9	 9





Original		Sustituto		Original		Sustituto	
	0		0		Title / Reveal		Shift + Sound / Title
	Recall		Back / Return		PRO		Shift + Display / Media
	Fav		Fav / Marker / PC		LAN / Hold		Shift + Smart / List
	Vol +		Vol+		Size / A-B		Zoom / Size
	Picture		Picture / Format		Goto / Subpage		Text / Goto
	Nicam / A2		Audio / Lang I/II		Index / Slow		Info / Angle
	CH +		CH+ / Page+				
	Vol -		Vol-				
	Sound		Sound / Title				
	Sleep		Sleep / Timer				
	CH -		CH- / Page-				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue / Screen		Blue / Prime Video / Random				
	Setup / TV/Txt		Setup / OPT /				
	D-Menu /		D.Menu / Top				



Cancel Menu