
 








 


 


 

 



 

 
 




	Original	Sustituto		Original	Sustituto
	Power		Power		>>I
	Source		AV		<<
	Open/Close		Eject		>>
	Sleep		Sleep		Stop
	1		1		Play
	2		2		Pause
	3		3		Vol +
	4		4		Vol -
	5		5		Mute
	6		6		Repeat
	7		7		Tuning+
	8		8		Tuning-
	9		9		Disc Menu
	0		0		Menu
	Dolby PL		Dual		Title Menu
	DSP/EQ		Guide		Tools
	I<<		I<<		Info





Original	Sustituto	Original	Sustituto
 Return	 Back		
 Exit	 Exit		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 Enter	 Ok		
 Red	 Red		
 Green/Tuner	 Green		
 Yellow/MO/ST	 Yellow		
 Blue/CD Ripping	 Blue		
 Dimmer	 Subt		
 S.Vol	 Format		
 P.Bass/Audio Upscale	 3D		





Original	Sustituto
Power	Power
Function Tv	AV
Sleep	Sleep
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
<<<	<<<
>>>	>>>
Stop	Stop
Play	Play

Original	Sustituto
Pause	Pause
Vol+	Vol +
Vol-	Vol -
Mute	Mute
CH+	Ch +
CH-	Ch -
Menu	Menu
Tools	Options
Info	Info
Return	Back
Exit	Exit
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
Red	Red





	Original	Sustituto		Original	Sustituto
TUNER MEMORY	Green	Green			
MO/ST	Yellow	Yellow			
CD RIPPING	Blue	Blue			

