



Original	Sustituto	Original	Sustituto
	Power		Power
	Open/Close		Eject
	Home		Smart
	Menu/Disc		Menu
	Options		Options
	Back		Back
	Stop		Stop
	Play		Play
	Pause		Pause
	I<		I<<
	>I		>>I
	>>		>>
	<<		<<
	Up		Up
	Down		Down
	Right		Right
	Left		Left
			Ok
			Subt
			Guide
			Dual
			Format
			Media
			Text

