


 


 
 


 
 
 
 
 

 

 

 
 
 

 

 

 
 
 

 

 
 
 
 
 

 

 
 
 
 
 


 
 


 

 

 


 


 






Original		Sustituto		Original		Sustituto	
	Power		Power		i		Info
	Mute		Mute		Up		Up
	1		1		Down		Down
	2		2		Right		Right
	3		3		Left		Left
	4		4		OK		Ok
	5		5		Vol+		Vol +
	6		6		Vol-		Vol -
	7		7		Tv/Radio		TV/R
	8		8		List		List
	9		9		P+		Ch +
	0		0		P-		Ch -
	Back		Back		Red/F1		Red
	APP		Media		Green/F2		Green
	Menu		Menu		Yellow/F3		Yellow
	Exit		Exit		Blue/F4		Blue
	EPG		Guide		Audio		Dual





Original	Sustituto
 [...]	 Subt
 [=]/Text	 Text
 Pause	 Pause
 OPT	 Options
 Tv/AV	 AV
 L+	 >>
 L-	 <<

Original	Sustituto

