



 










 

 

 
 











Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Red/M	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Up	 Up
 Down	 Down

Original	Sustituto
 Right	 Right
 Left	 Left
 OK	 Ok
 PR+	 Ch +
 PR-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Menu	 Menu
 TV	 TV/R
 Video	 AV
 L/?	 Guide
 PC	 Dual
 Text	 Pre Ch
 F[+]	 Text
 F[+]	 3D
 Hold/Freeze	 Format
 M/S	 Options





Original	Sustituto
 Mute	 Mute
 PIP	 Media
 Auto/Page	 Smart
 i	 Info
 Timer/Mix	 Subt
 F1	 Shift + 1
 F2	 Shift + 2
 F3	 Shift + 3
 F4	 Shift + 4

Original	Sustituto

