









































 



















 

 

 





Original	Sustituto
 Power	 Power
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 TV/SAT	 AV / Input / RDS
 TV/Radio	 TV/Radio /
 Zoom	 Zoom / Size
 List	 Smart / List
 Audio	 Audio / Lang I/II
 EPG	 Guide / EPG / -/--
 Timer	 Sleep / Timer
 Text	 Text / Goto
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 M/P	 Display / Media
 Mute	 Mute / Dimmer

Original	Sustituto
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Vol+	 Vol+
 Vol-	 Vol-
 Recall	 Back / Return
 P+	 >>  / Preset+
 P-	  << / Preset-
 FAV	 Fav / Marker / PC
 1	 1
 2	 2
 3	 3
 4	 4







Original	Sustituto

Original	Sustituto







Original	Sustituto	Original	Sustituto
Mute	Mute / Dimmer	Menu Down	Down
PWR On/Off	Power	Back	Back / Return
App	+  Shift + Green / APP /	Volume+	Vol+
Epg	Guide / EPG / -/--	CH/Page+	CH+ / Page+
Info	Info / Angle	Volume-	Vol-
Subt.List	Subtitle / EQ	CH/Page-	CH- / Page-
TV	TV/Radio /	Audio	Audio / Lang I/II
Text	Text / Goto	1. ?	1
Zoom	Zoom / Size	2abc	2
Menu	Menu / Home	3def	3
TV/SAT	AV / Input / RDS	4ghi	4
Menu Up	Up	5jkl	5
Display	Display / Media	6mno	6
Menu Left	Left	7pqrm	7
OK Enter	OK	8tuv	8
Menu Right	Right	9wxyz	9
Exit	Exit / Cancel / Clear	Guide Pilote	+  Shift + Guide / EPG / -/--

Original	Sustituto	Original	Sustituto
Mute	Mute / Dimmer	Menu Down	Down
PWR On/Off	Power	Back	Back / Return
App	+  Shift + Green / APP /	Volume+	Vol+
Epg	Guide / EPG / -/--	CH/Page+	CH+ / Page+
Info	Info / Angle	Volume-	Vol-
Subt.List	Subtitle / EQ	CH/Page-	CH- / Page-
TV	TV/Radio /	Audio	Audio / Lang I/II
Text	Text / Goto	1. ?	1
Zoom	Zoom / Size	2abc	2
Menu	Menu / Home	3def	3
TV/SAT	AV / Input / RDS	4ghi	4
Menu Up	Up	5jkl	5
Display	Display / Media	6mno	6
Menu Left	Left	7pqrm	7
OK Enter	OK	8tuv	8
Menu Right	Right	9wxyz	9
Exit	Exit / Cancel / Clear	Guide Pilote	+  Shift + Guide / EPG / -/--

















































Original	Sustituto	Original	Sustituto
0/10	0		
FAV Pref.	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Dec/Pause	Pause / Step / Freeze		
	Smart / List		
	D.Menu / Top		





Original	Sustituto	Original	Sustituto
Power	 Power	Recall	 Back / Return
Mute	 Mute / Dimmer	Vol+	 Vol+
Pause	 Pause / Step / Freeze	List	 Smart / List
Audio	 Audio / Lang I/II	P+	 CH+ / Page+
Zoom	 Zoom / Size	Vol-	 Vol-
Timer	 Sleep / Timer	M/P	 Display / Media
Tv/Radio	 TV/Radio /	P-	 CH- / Page-
Text	 Text / Goto	1	 1
Tv/SAT	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Up/CH+	 Up	4	 4
Info	 Info / Angle	5	 5
Left	 Left	6	 6
OK	 OK	7	 7
Right	 Right	8	 8
Exit	 Exit / Cancel / Clear	9	 9
Down/CH-	 Down	EPG	 Guide / EPG / -/-

Original	Sustituto	Original	Sustituto
Power	 Power	Recall	 Back / Return
Mute	 Mute / Dimmer	Vol+	 Vol+
Pause	 Pause / Step / Freeze	List	 Smart / List
Audio	 Audio / Lang I/II	P+	 CH+ / Page+
Zoom	 Zoom / Size	Vol-	 Vol-
Timer	 Sleep / Timer	M/P	 Display / Media
Tv/Radio	 TV/Radio /	P-	 CH- / Page-
Text	 Text / Goto	1	 1
Tv/SAT	 AV / Input / RDS	2	 2
Menu	 Menu / Home	3	 3
Up/CH+	 Up	4	 4
Info	 Info / Angle	5	 5
Left	 Left	6	 6
OK	 OK	7	 7
Right	 Right	8	 8
Exit	 Exit / Cancel / Clear	9	 9
Down/CH-	 Down	EPG	 Guide / EPG / -/-



