


 










Original	Sustituto
 Power	 Power
 Open/Close	 Eject / Surround
 Power Tv	 Shift + Power
 DVD	 Shift + 2
 HDD	 Shift + 7
 AV/Input	 AV / Input / RDS
 AV/Input Tv	 Shift + AV / Input / RDS
 1	 1
 2	 2
 3	 3
 PR/CH+ Tv	 Shift + CH+ /
 4	 4
 5	 5
 6	 6
 PR/CH- Tv	 Shift + CH- /
 7	 7
 8	 8

Original	Sustituto
 9	 9
 Vol+ Tv	 Vol+
 Dubbing	 Setup / OPT /
 0	 0
 PIP	 Picture / Format
 Vol- Tv	 Vol-
 O)/Audio	 Audio / Lang I/II
 [...] / Subtitle	 Subtitle / EQ
 CHP.ADD	 Guide / EPG / -/-
 Rec	 Rec / Rec Mode
 Rec Mode	 Shift + Rec / Rec Mode
 Title	 Sound / Title
 <<	 << / Tune-
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Pause/Step	 Pause / Step / Freeze





Original	Sustituto
	Play / Slow
	Stop / Hold
	Menu / Home
	Up
	CH+ / Page+
	Smart / List
	Left
	OK
	Right
	Display / Media
	Down
	CH- / Page-
	Back / Return
	Sleep / Timer
	Fav / Marker / PC
	Red / Netflix / Search
	Exit / Cancel / Clear

Original	Sustituto
	Zoom / Size
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	D.Menu / Top
	TV/Radio /
	Info / Angle

