



Original	Sustituto	Original	Sustituto
	Power		Power
	Eject		Eject
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	DVD/DVB		Smart
	Tv/Radio		TV/R
	Digest		Format
	Angle/FAV		Pre Ch
	A-B/Return		Back
	Title/PgUp		Ch +
	Prog/PgDn		Ch -
	Zoom/EPG		Guide
	SUB-T		Subt
	TTX		Text
	PBC/Menu		Menu
	Audio		Dual
	Display/Info		Info
	Exit		Exit
	Up/CH+		Up
	Down/CH-		Down
	Right		Right
	Left		Left
	OK		Ok
	Vol+		Vol +
	Vol-		Vol -
	Goto/List		List





Original	Sustituto	Original	Sustituto
Rec	Rec		
Stop	Stop		
Play	Play		
Pause	Pause		
<<	<<		
>>	>>		
I<<	I<<		
>>I	>>I		
Red/Slow	Red		
Green/Step	Green		
Yellow/Repeat	Yellow		
Blue/Direct	Blue		
Setup	Options		
USB	AV		
Mute	Mute		
Video	3D		

