 



 




 






Original	Sustituto
 Power	 Power
 Vol+	 Vol +
 Vol-	 Vol -
 Home	 Smart
 P+	 Ch +
 P-	 Ch -
 Guide	 Guide
 Input	 AV
 Back	 Back
 Exit	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Colors	 Red
 Play	 Play

Original	Sustituto
 Stop	 Stop
 123#	 Pre Ch
 Rakuten Tv	 TV/R
 Netflix	 Media
 YouTube	 Shift + Media

