







 





























Original	Sustituto
 Power	 Power
 i	 ANGLE INFO Info / Angle
 Analog Menu	 HOME MENU Menu / Home
 Digital Menu	 TOP MENU D.MENU D.Menu / Top
 1	 TV 1
 2	 DVD 2
 3	 CD - STB 3
 Input Select	 RDS AV INPUT AV / Input / RDS
 4	 VIDEO 4
 5	 TAPE 5
 6	 TUNER 6
 TV/DVB-T	 MEDIA DISPLAY Display / Media
 7	 AUX - HDD 7
 8	 USB 8
 9	 BLUETOOTH 9
 Guide (EPG)	 GUIDE EPG Guide / EPG / -/-
 Timer	 TIMER SLEEP Sleep / Timer

Original	Sustituto
 0	 HDMI - BAT 0
 Mute	 DIMMER MUTE Mute / Dimmer
 Exit	 CLEAR EXIT CANCEL Exit / Cancel / Clear
 Vol+	 + VOL Vol+
 Up	 Up
 P+	 + CH PAGE CH+ / Page+
 Left	 Left
 Enter/CH List	 OK OK
 Enter/CH List	 LIST SMART Smart / List
 Right	 Right
 Vol-	 VOL - Vol-
 Down	 Down
 P-	 CH PAGE - CH- / Page-
 TV/Radio	 PROGRAM TV / RADIO TV/Radio /
 [≡]	 GOTO TEXT Text / Goto
 [≡o] [≡o]/P↔P	 RETURN BACK Back / Return
 Picture Size	 FORMAT PICTURE Picture / Format



