




 
 

 
 
 





 
 



 


 
 


 
 


 
 
 
 

 

 
 
 
 
 

 



 

 
 
 

 
 




 
 

 

 





Original	Sustituto	Original	Sustituto
 Standby	 Power	 Down	 Down
 PVR Rec	 Rec	 Right	 Right
 PVR List	 List	 Left	 Left
 Mute	 Mute	 OK	 Ok
 EPG	 Guide	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Info	 Info	 1	 1
 DTV/VCR	 Smart	 2	 2
 TTX	 Text	 3	 3
 Subtitle	 Subt	 4	 4
 Menu	 Menu	 5	 5
 Exit	 Exit	 6	 6
 Tv/Radio	 TV/R	 7	 7
 Favourite	 Pre Ch	 8	 8
 CH+	 Ch +	 9	 9
 CH-	 Ch -	 0	 0
 Up	 Up	 Recall	 Back








 

 
 
 





 



 
 

 

 
 
 
 
 

 
 
 
 
 

 





 
 
 



 
 

 

 
 


Original	Sustituto	Original	Sustituto
 GOTO	Goto	 ECO 3D	3D
	<<		<<
	>>		>>
	<<		<<
	>>		>>
	Play	 PLAY MODE	Play
	Pause		Pause
	Stop		Stop
 RPT	RPT	 APP MEDIA	Media
	Red	 A	Red
	Green	 B	Green
	Yellow	 C	Yellow
	Blue	 D	Blue

Original	Sustituto	Original	Sustituto





Original	Sustituto	Original	Sustituto
 Standby	 Power	 Down	 Down
 PVR Rec	 Rec	 Right	 Right
 PVR List	 List	 Left	 Left
 Mute	 Mute	 OK	 Ok
 EPG	 Guide	 Vol+	 Vol +
 Audio	 Dual	 Vol-	 Vol -
 Info	 Info	 1	 1
 DTV/VCR	 Smart	 2	 2
 TTX	 Text	 3	 3
 Subtitle	 Subt	 4	 4
 Menu	 Menu	 5	 5
 Exit	 Exit	 6	 6
 Tv/Radio	 TV/R	 7	 7
 Favourite	 Pre Ch	 8	 8
 CH+	 Ch +	 9	 9
 CH-	 Ch -	 0	 0
 Up	 Up	 Recall	 Back





	Original	Sustituto	Original	Sustituto
	Goto	 3D		
	<<			
	>>			
	I<<			
	>>I			
	Play			
	Pause			
	Stop			
	RPT			
	Red			
	Green			
	Yellow			
	Blue			

