



Original		Sustituto		Original		Sustituto	
	Power		Power		Vol+ Tv		Vol+
	Power Tv		Shift + Power		Dubbing		Setup / OPT /
	DVD		Shift + 2		0		0
	HDD		Shift + 7		AV/Input		AV / Input / RDS
	Open/Close		Eject / Surround		Vol- Tv		Vol-
	Av/Input Tv		Shift + AV / Input / RDS		<< Scan		<< / Tune-
	1		1		Scan >>		>> / Tune+
	2		2		I<< Skip		I<< / Preset-
	3		3		Skip >>I		>>I / Preset+
	PR/CH+ Tv		Shift + CH+ /		Pause/Step		Pause / Step / Freeze
	4		4		Play		Play / Slow
	5		5		Stop		Stop / Hold
	6		6		Home		Menu / Home
	PR/CH- Tv		Shift + CH- /		Up		Up
	7		7		PR/CH+		CH+ / Page+
	8		8		Menu/List		D.Menu / Top
	9		9		Menu/List		Smart / List





Original	Sustituto
	Left
	Enter
	Right
	Display
	Down
	CH- / Page-
	Return
	Timeshift
	Audio
	Subtitle
	CHP.ADD
	Rec
	Rec Mode
	Title
	Thumbnail
	Zoom
	Marker
	Display / Media
	Display / Media
	CH- / Page-
	Back / Return
	Info / Angle
	Audio / Lang I/II
	Subtitle / EQ
	Text / Goto
	Rec / Rec Mode
	Shift + Rec / Rec Mode
	Sound / Title
	Picture / Format
	Zoom / Size
	Fav / Marker / PC

Original	Sustituto
	Search
	Clear
	Repeat
	A-B
	Tv/DVD
	*
	Red / Netflix / Search
	Exit / Cancel / Clear
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	TV/Radio /
	Guide / EPG / -/--

