







 



 
 


 
 

 
 



 



 



 



 


 
 


 
 
 


 
 


 
 


 
 


 



 







Original	Sustituto	Original	Sustituto
 Power	 Power	 Blue / Title	 Blue
 HDMI Control	 Smart	 1	 1
 Rec	 Rec	 2	 2
 Play	 Play	 3	 3
 Pause	 Pause	 4	 4
 Stop	 Stop	 5	 5
 I<<	 I<<	 6	 6
 <<	 <<	 7	 7
 >>	 >>	 8	 8
 >>I	 >>I	 9	 9
 Screen	 Format	 0	 0
 Lang	 Dual	 Text	 Text
 Subtitle	 Subt	 Swap	 Pre Ch
 PIP / World	 3D	 Up	 Up
 Red / Zoom	 Red	 Right	 Right
 Green / Repeat	 Green	 Down	 Down
 Yellow / Root	 Yellow	 Left	 Left





	Original	Sustituto		Original	Sustituto
	OK		Ok		
	P/CH +		Ch +		
	P/CH -		Ch -		
	Mute		Mute		
	Vol +		Vol +		
	Vol -		Vol -		
	Menu		Menu		
	Source		AV		
	Return		Back		
	EPG		Guide		
	Info		Info		
	Sleep		Sleep		
	FAV		Shift + Pre Ch		
	Angle / Media		Media		
	Search Mode		TV/R		
	Display		Shift + Info		
	Presets		List		

