










 






Original	Sustituto
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+	 Vol+
 Vol-	 Vol-
 Left	 Left
 Right	 Right
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Original	Sustituto
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 Play/Pause	 Pause / Step / Freeze
 I>/Resume	 Shift + Play /
 Surround	 Eject / Surround
 Sound	 Sound / Title
 Night	 Shift + Sleep / Timer
 Mute	 Mute / Dimmer
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Sleep	 Sleep / Timer
 DIM	 Shift + Mute / Dimmer
 Subw +	 Up
 Rear +	 Shift + CH+ /
 Center +	 CH+ / Page+
 Tv Vol+	 Shift + Vol+
 Subw -	 Down





Original		Sustituto	
REAR	Rear -	SHIFT + CH PAGE	Shift + CH- /
CENTER	Center -	CH PAGE	CH- / Page-
TV VOL	Tv Vol-	SHIFT + VOL	Shift + Vol-

Original	Sustituto



 



 





 

 

 

 

 

 

 











Original	Sustituto
Standby	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Disc (DVD)	D.Menu / Top
0	0
Vol+	Vol+
System (DVD)	Menu / Home
Vol-	Vol-
I<<	I<< / Preset-
>>I	>>I / Preset+

Original	Sustituto
Stop	Stop / Hold
Play/Pause	Play / Slow
I>/Resume	Shift + Play /





Original	Sustituto	Original	Sustituto
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down





Original	Sustituto
 Standby	 Power
 1	 TV 1
 2	 DVD 2
 3	 CD - STB 3
 4	 VIDEO 4
 5	 TAPE 5
 6	 TUNER 6
 7	 AUX - HDD 7
 8	 USB 8
 9	 BLUETOOTH 9
 0	 HDMI - SAT 0

Original	Sustituto

