 

 

 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 


 


 


 

 
 
 

 




 






 
 
 
 
 
 
 

 

 

 
 




Original	Sustituto
 Power	 Power
 Eject/Auto	 Eject
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -

Original	Sustituto
 Aspect	 Format
 Audio	 Dual
 CH+	 Ch +
 CH-	 Ch -
 Display	 Info
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 LCD Menu	 Menu
 DVD Setup/Exit	 Exit
 DVD Setup/Exit	 Options
 Input	 AV
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 Sleep	 Sleep





Original	Sustituto
	Shift + Pre Ch
	Shift + Ch -
	Shift + Ch +
	Guide
	Text
	Shift + Eject
	TV/R
	3D
	List
	Subt
	Smart
	D. Menu
	Media
	Play
	Pause

Original	Sustituto
	Rec
	Stop
	I<<
	>>I
	Red
	Green
	Yellow
	Blue

