 

 

 

 
 
 
 
 
 
 
 
 

 
 
 
 
 
 
 
 
 
 


 





 
 
 
 

 




 






 
 
 
 
 
 
 
 

 

 
 
 




| Original | Sustituto |
|--|--|
|  Power |  Power |
|  Eject/Auto |  Eject |
|  Mute |  Mute |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  0 |  0 |
|  -/-- |  SHIFT + -/-- Shift + Guide |
|  Recall |  FAV PRE-CH Pre Ch |
|  Vol+ |  + VOL Vol + |
|  Vol- |  - VOL Vol - |

| Original | Sustituto |
|--|---|
|  Aspect |  PICTURE FORMAT Format |
|  Audio |  SOUND DUAL Dual |
|  CH+ |  + CH Ch + |
|  CH- |  - CH Ch - |
|  Display |  DISPLAY INFO Info |
|  Up |  Up |
|  Right |  Right |
|  Down |  Down |
|  Left |  Left |
|  OK |  OK Ok |
|  LCD Menu |  TOP MENU MENU Menu |
|  DVD Setup/Exit |  CLEAR EXIT Exit |
|  DVD Setup/Exit |  SETTINGS OPT Options |
|  Input |  TIMER AV AV |
|  P.Mode |  SHIFT + PICTURE FORMAT Shift + Format |
|  S.Mode |  SHIFT + SOUND DUAL Shift + Dual |
|  Sleep |  PROG SLEEP Sleep |





| Original | Sustituto |
|----------|----------------|
| | Shift + Pre Ch |
| | Shift + Ch - |
| | Shift + Ch + |
| | Guide |
| | Text |
| | Shift + Eject |
| | TV/R |
| | 3D |
| | List |
| | Subt |
| | Smart |
| | D. Menu |
| | Media |
| | Play |
| | |
| | Pause |
| | |

| Original | Sustituto |
|----------|-----------|
| | Rec |
| | Stop |
| | I<< |
| | >>I |
| | Red |
| | Green |
| | Yellow |
| | Blue |

