



Original		Sustituto		Original		Sustituto	
	Standby		Power		NICAM		Shift + Audio / Lang I/II
	Open/Close /		Eject / Surround		CH +		CH+ / Page+
	MUTE		Mute / Dimmer		VOL -		Vol-
	1		1		DISPLAY		Display / Media
	2		2		CH -		CH- / Page-
	3		3		Up		Up
	4		4		Left		Left
	5		5		OK		OK
	6		6		Right		Right
	7		7		LCD MENU		Shift + Menu /
	8		8		Down		Down
	9		9		EXIT		Exit / Cancel / Clear
	/--		Shift + Guide / EPG / -/--		INPUT		AV / Input / RDS
	0		0		P.MODE		Picture / Format
	RECALL		Back / Return		S.MODE		Sound / Title
	VOL +		Vol+		SLEEP		Sleep / Timer
	ASPECT		Shift + Picture / Format		FAV		Fav / Marker / PC





Original	Sustituto
FAV -	Shift + CH- /
FAV +	Shift + CH+ /
EPG	Guide / EPG / -/--
TEXT	Text / Goto
HOLD	Shift + Stop /
Subtitle	Subtitle / EQ
TV/RADIO	TV/Radio /
INDEX / D.DISP	Menu / Home
SIZE / ZOOM	Zoom / Size
REVEAL/ANGLE	Info / Angle
TITLE / Subpage	Shift + Sound / Title
D.MENU	D.Menu / Top
Audio	Audio / Lang I/II
Goto	Shift + Text /
Setup	Setup / OPT /
MEDIA	Shift + Display / Media
PLAY/PAUSE	Play / Slow

Original	Sustituto
PLAY/PAUSE	Shift + Play /
<<	<< / Tune-
>>	>> / Tune+
REC	Rec / Rec Mode
STOP	Stop / Hold
I<<	I<< / Preset-
>>I	>>I / Preset+
RED / Prog	Red / Netflix / Search
GREEN / Intro	Green / APP / Repeat
YELLOW /	Yellow / YouTube / Repeat
YELLOW /	Shift + Yellow / YouTube /
BLUE / A-B	Blue / Prime Video / Random

