



 

 

 

 



 

 

 

 











 







































Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	DTV / ATV		D.Menu / Top
	0		0
	Recall		Back / Return
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Vol +		Vol+
	MTS		Audio / Lang I/II
	CH +		CH+ / Page+
	Vol -		Vol-
	REC List		Smart / List
	CH -		CH- / Page-
	FAV List		Fav / Marker / PC
	REC		Rec / Rec Mode
	Freeze		Pause / Step / Freeze
	Menu		Menu / Home
	Up		Up
	Source		AV / Input / RDS
	Left		Left
	Enter		OK
	Right		Right
	Exit		Exit / Cancel / Clear
	Down		Down





Original	Sustituto	Original	Sustituto
Display	Display / Media	Hold	+ Shift + Stop /
Red	Red / Netflix / Search	Text	Text / Goto
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
<< / Guide	<< / Tune-		
<< / Guide	Guide / EPG / -/--		
Play/Pause / Timeshift	Play / Slow		
>> / Aspect	>> / Tune+		
<< / Cancel	<< / Preset-		
>> / Subpage	>> / Preset+		
Stop / Index	Info / Angle		
Stop / Index	Stop / Hold		
TV / Radio	TV/Radio /		
Subtitle	Subtitle / EQ		
Reveal	Setup / OPT /		
Size	Zoom / Size		

