




 





| Original | Sustituto |
|--|---|
|  Power CD |  Power |
|  Power |  9 |
|  Power USB/Audio |  Shift + Power |
|  Open/Close |  Eject / Surround |
|  Bluetooth/FM |  Shift + 9 |
|  CD |  3 |
|  USB/Audio In |  8 |
|  Album/Preset Up |  Up |
|  Album/Preset Up Bluetooth/FM |  CH+ / Page+ |
|  Album/Preset Up USB/Audio In |  Shift + Up |
|  I<< CD |  I<< / Preset- |
|  I<< Bluetooth/FM |  Shift + Left |
|  I<< USB/Audio In |  Left |
|  Play CD |  Play / Slow |
|  Pause CD |  Pause / Step / Freeze |
|  Play/Pause USB/Audio In |  Shift + Play / |
|  >>I CD |  >>I / Preset+ |

| Original | Sustituto |
|---|---|
|  >>I Bluetooth/FM |  Shift + >>I / Preset+ |
|  >>I USB/Audio In |  Shift + I<< / Preset- |
|  Album/Preset Down CD |  Down |
|  Album/Preset Down |  CH- / Page- |
|  Album/Preset Down USB/Audio |  Shift + Down |
|  Repeat |  Green / APP / Repeat |
|  Repeat USB/Audio |  Back / Return |
|  Vol+ |  Vol+ |
|  Stop CD |  Stop / Hold |
|  Stop USB/Audio In |  Shift + Stop / |
|  Vol- |  Vol- |
|  Shuffle |  Blue / Prime Video / Random |
|  Shuffle USB/Audio In |  AV / Input / RDS |
|  Mute |  Mute / Dimmer |
|  Display |  Display / Media |
|  Display USB/Audio In |  Shift + Display / Media |
|  Prog |  TV/Radio / |



