



| Original | Sustituto |
|--------------|-------------------|
| Open/Close | Eject / Surround |
| HDD | Shift + 7 |
| DVD | Shift + 2 |
| Power | Power |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| Prog + | CH+ / Page+ |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| Prog - | CH- / Page- |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| Input Select | AV / Input / RDS |
| Audio | Audio / Lang I/II |

| Original | Sustituto |
|-----------------------|-----------------------------|
| 0 | 0 |
| Subtitle | Subtitle / EQ |
| TV / DVD | TV/Radio / |
| Red / Top Menu | Red / Netflix / Search |
| Red / Top Menu | D.Menu / Top |
| Green / Menu | Green / APP / Repeat |
| Green / Menu | Menu / Home |
| Yellow / Chapter Mark | Yellow / YouTube / Repeat |
| Blue / Erase Mark | Blue / Prime Video / Random |
| System Menu | Smart / List |
| Title List | Sound / Title |
| TV Guide | Guide / EPG / -/-- |
| Schedule | Fav / Marker / PC |
| Up | Up |
| Info | Info / Angle |
| Left | Left |
| Enter | OK |





| Original | Sustituto |
|-----------------|-----------------------|
| Right | Right |
| Return | Back / Return |
| Down | Down |
| Options | Setup / OPT / |
| I<< / Day - | I<< / Preset- |
| ← Page | Shift + Left |
| Page → | Shift + Right |
| >>I / Day + | >>I / Preset+ |
| << / <II / <I | << / Tune- |
| Play | Play / Slow |
| I> / II> / >> | >> / Tune+ |
| Display | Display / Media |
| Pause | Pause / Step / Freeze |
| Stop | Stop / Hold |
| Rec | Rec / Rec Mode |
| Rec Stop | Shift + Stop / |
| → / Synchro Rec | Shift + OK |

| Original | Sustituto |
|-----------|--------------------------|
| Rec Mode | Shift + Rec / Rec Mode |
| TV Vol + | Vol+ |
| TV Prog + | Shift + CH+ / |
| TV Power | Shift + Power |
| TV Vol - | Vol- |
| TV Prog - | Shift + CH- / |
| TV Input | Shift + AV / Input / RDS |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

