 



 

 

 









 

 


 






 

 

 

 

 






 
 
 
 


 



 










Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Source	 AV / Input / RDS
 0	 0
 Info	 Info / Angle
 DMP	 D.Menu / Top
 Up	 Up
 EPG	 Guide / EPG / -/--

Original	Sustituto
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol +	 Vol+
 List	 Smart / List
 CH +	 CH+ / Page+
 Vol -	 Vol-
 CH -	 CH- / Page-
 Fav	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 Index	 Display / Media
 Recall	 Back / Return
 Red / <<	 Red / Netflix / Search
 Red / <<	 << / Tune-





 
 
 
 
 
 
 
 
 


 
 
 


 

 





 

 

 




Original	Sustituto
 Green / >>	 >> / Tune+
 Green / >>	 Green / APP / Repeat
 Yellow / I<<	 I<< / Preset-
 Yellow / I<<	 Yellow / YouTube / Repeat
 Blue / >>I	 Blue / Prime Video / Random
 Blue / >>I	 >>I / Preset+
 Text / Play/Pause	 Text / Goto
 Text / Play/Pause	 Pause / Step / Freeze
 Text / Play/Pause	 Play / Slow
 Stop / Still	 Stop / Hold
 Timer / Subtitle	 Subtitle / EQ
 Size / Aspect	 Zoom / Size
 Cancel [≡X]	 Shift + Exit / Cancel / Clear
 Radio	 TV/Radio /
 Audio / I/II	 Audio / Lang I/II
 Rec	 Rec / Rec Mode

Original	Sustituto





Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	[≡?]/Source		AV / Input / RDS
	0		0
	[≡i]/Info		Info / Angle
	DMP		D.Menu / Top
	Up		Up
	EPG		Guide / EPG / -/--

Original	Sustituto	Original	Sustituto
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Exit		Exit / Cancel / Clear
	Vol+		Vol+
	List		Smart / List
	CH+		CH+ / Page+
	Vol-		Vol-
	CH-		CH- / Page-
	Fav / Marker / PC		Fav / Marker / PC
	Sleep		Sleep / Timer
	Index		Display / Media
	Back		Back / Return
	Red		Red / Netflix / Search
	<<		<< / Tune-





	Original	Sustituto	Original	Sustituto
	Green	Green / APP / Repeat		
	>>	>> / Tune+		
	Yellow	Yellow / YouTube / Repeat		
	I<<	I<< / Preset-		
	Blue	Blue / Prime Video / Random		
	>>I	>>I / Preset+		
	Play	Play / Slow		
	Pause	Pause / Step / Freeze		
	[≡]	Text / Goto		
	Stop/Still	Stop / Hold		
	[≡+]	Picture / Format		
	[≡o]/Subtitle	Subtitle / EQ		
	[≡◆]/[+]	Zoom / Size		
	[≡x]	Setup / OPT /		
	Radio	TV/Radio /		
	Audio	Audio / Lang I/II		
	Rec	Rec / Rec Mode		

