




 

 

 
 






 



 

 

 












Original	Sustituto	Original	Sustituto
	Power		Power
	Input		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Lang		Dual
	TXT		Text
	P+		Ch +
	P-		Ch -
	Home		Smart

Original	Sustituto	Original	Sustituto
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	[i+]		Info
	Guide		Guide
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Prime Video		Shift + Smart





Original	Sustituto
Netflix	Media
FPay	Shift + Media
Pause	Pause
>>	>>
<<	<<
Rec	Rec
Play	Play
Stop	Stop

Original	Sustituto

