







 















 
 







 






 
 
Original	Sustituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 List
 Recall	 Back
 Vol+	 Vol +
 Vol-	 Vol -
 Aspect	 3D

Original	Sustituto
 Home	 Smart
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Source	 AV
 Exit	 Exit
 Display	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 P.Mode	 Shift + Format
 S.Mode	 Dual
 Sleep	 Sleep
 MTS	 Options
 Rec	 Rec





Original	Sustituto
 Guide	 Guide
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 <</Index	 <<
 Play	 Play
 Pause/Cancel	 Pause
 >>	 >>
 I<</Sub.PG	 I<<
 >>I/Reveal	 >>I
 Stop/Mix	 Stop
 TTX	 Text
 CAP	 Media
 Subtitle	 Subt
 Tv/Radio	 TV/R
 FAV	 Pre Ch

Original	Sustituto
 Size/Mouse	 Format
 Hold/Refresh	 D. Menu

