


 




| Original | Sustituto |
|--|---|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  Play |  Play / Slow |
|  Pause/[≡] |  Pause / Step / Freeze |
|  Stop/[≡+] |  Stop / Hold |
|  Rec/[≡◆] |  Rec / Rec Mode |
|  <</[≡o] |  << / Tune- |
|  <</[≡i] |  << / Preset- |
|  >> /[≡?] |  >> / Preset+ |
|  >>/[≡x] |  >> / Tune+ |
|  Info |  Info / Angle |
|  OI/II/Audio |  Audio / Lang I/II |
|  [≡] |  Text / Goto |
|  ←/<x] |  Fav / Marker / PC |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |

| Original | Sustituto |
|---|--|
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  * |  Setup / OPT / |
|  0 |  0 |
|  Up |  Up |
|  [→] |  AV / Input / RDS |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Netflix |  Shift + Red / Netflix / |
|  YouTube |  Shift + Yellow / YouTube / |
|  Vol+ |  Vol+ |





| Original | Sustituto |
|--------------|-----------------------|
| Power | Power |
| Mute | Mute / Dimmer |
| Play | Play / Slow |
| Pause [/≡] | Pause / Step / Freeze |
| Stop/[≡+] | Stop / Hold |
| Rec/[≡◆] | Rec / Rec Mode |
| <</[≡o] | << / Tune- |
| <</[≡i] | << / Preset- |
| >> /[≡?] | >> / Preset+ |
| >>/[≡x] | >> / Tune+ |
| Info | Info / Angle |
| O) /II/Audio | Audio / Lang I/II |
| [≡] | Text / Goto |
| ←/<x] | Fav / Marker / PC |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |

| Original | Sustituto |
|----------|----------------------------|
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| * | Setup / OPT / |
| 0 | 0 |
| [→] | AV / Input / RDS |
| Up | Up |
| Left | Left |
| OK | OK |
| Right | Right |
| Down | Down |
| Netflix | Shift + Red / Netflix / |
| YouTube | Shift + Yellow / YouTube / |
| Vol+ | Vol+ |



