



Original	Sustituto
 Standby	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 i / Display	 Display / Media
 0	 0
 Recall / Mouse	 Back / Return
 TV / Radio	 TV/Radio /
 Audio	 Audio / Lang I/II
 SUB-T	 Subtitle / EQ

Original	Sustituto
 Source	 AV / Input / RDS
 www / Browser	 Smart / List
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol +	 Vol+
 Home	 Shift + Menu /
 CH +	 CH+ / Page+
 Setup	 Setup / OPT /
 CH -	 CH- / Page-
 Vol -	 Vol-
 Refresh	 Info / Angle
 Red	 Red / Netflix / Search





Original	Sustituto
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Screenshot	 D.Menu / Top
 Stop	 Stop / Hold
 Play/Pause / Size	 Play / Slow
 Play/Pause / Size	 Pause / Step / Freeze
 Play/Pause / Size	 Zoom / Size
 TXT / Mix	 Text / Goto
 << / Index	 << / Tune-
 >> / Hold	 >> / Tune+
 >> / Hold	 Shift + Stop /
 I<< / Reveal	 I<< / Preset-
 >>I / Cancel	 >>I / Preset+

Original	Sustituto

