



























 

 
 








 





 





 



 



Original	Sustituto
	 Power
	 D.Menu / Top
	 Mute / Dimmer
	 Shift + 0
	 Display / Media
	 AV / Input / RDS
	 Zoom / Size
	 Sleep / Timer
	 1
	 2
	 3
	 Fav / Marker / PC
	 4
	 5
	 6
	 Pause / Step / Freeze
	 7

Original	Sustituto
	 8
	 9
	 Shift + CH+ /
	 TV/Radio /
	 0
	 Back / Return
	 Shift + CH- /
	 CH+ / Page+
	 Up
	 Left
	 Vol-
	 Smart / List
	 OK
	 Right
	 Vol+
	 CH- / Page-
	 Down





Original	Sustituto
 Menu	 Menu / Home
 Exit	 Exit / Cancel / Clear
 Info	 Info / Angle
 EPG	 Guide / EPG / -/--
 Red / Find	 Red / Netflix / Search
 Green / V-Format	 Picture / Format
 Green / V-Format	 Green / APP / Repeat
 Yellow / TXT	 Text / Goto
 Yellow / TXT	 Yellow / YouTube / Repeat
 Blue / Audio	 Audio / Lang I/II
 Blue / Audio	 Blue / Prime Video / Random
 Record	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold
 Shift	 Setup / OPT /
 << Fast	 << / Tune-
 >> Fast	 >> / Tune+

Original	Sustituto
 < Slow	 I<< / Preset-
 > Slow	 >>I / Preset+

