


 
 
 
 

 
 
 
 
 
 

 

 

 

 

 

 

 

 

 






 





 








 

 



 

 

 




 

 



 














Original	Sustituto
 Power	 Power
 Mute	 Mute
 TV	 TV/R
 Audio	 Shift + TV/R
 Clock /Pop-Up M.	 Smart
 ->[]<- / Zoom	 Eject
 Sound	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / AV	 0

Original	Sustituto
 EPG	 Guide
 Media	 Media
 Pip/[]	 3D
 Text / Disc M	 Text
 Text / Disc M	 D. Menu
 Menu	 Menu
 End	 Back
 Info	 Info
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 P+	 Ch +
 P-	 Ch -



 

 


 

 

 

 



 

 

 

 

 





 

 




 

 
 


Original		Sustituto		Original	Sustituto
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue/Marker		Blue		
	<<		<<		
	Play		Play		
	>>		>>		
	Rec		Rec		
	Pause		Pause		
	Stop		Stop		













Original	Sustituto
 Power	 Power
 Pop-Up-M	 Smart
 →[]← / Zoom	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 0
 EPG	 Guide
 Media	 Media
 PIP/[]	 3D
 Text / Disc-M	 Text

Original	Sustituto
 Text / Disc-M	 D. Menu
 Menu	 Menu
 End	 Exit
 Info	 Info
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 P+	 Ch +
 P-	 Ch -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue/Marker	 Blue
 <<	 <<
 Play	 Play



 

 


 

 

 

 



 

 

 

 

 





 

 



 








 



 



 

















Original	Sustituto	Original	Sustituto
	>>		>>
	Rec		Rec
	Pause		Pause
	Stop		Stop




 








Original	Sustituto
 Power	 Power
 Pop-Up-M	 Smart
 →[]←/Zoom	 Format
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0/AV	 0
 EPG	 Guide
 Media	 Media
 PIP/[]	 3D
 Text / Disc-M	 Text

Original	Sustituto
 Text / Disc-M	 D. Menu
 Menu	 Menu
 End	 Exit
 Info	 Info
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 P+	 Ch +
 P-	 Ch -
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue/Marker	 Blue
 <<	 <<
 Play	 Play






 
 
 
 

 
 
 
 
 
 

 

 

 

 

 

 

 

 

 





Original	Sustituto
 >>	 >>
 Rec	 Rec
 Pause	 Pause
 Stop	 Stop

Original	Sustituto



 

 




 


 
 
 
 





Original	Sustituto
 Power	 Power
 Mute	 Mute
 TV	 TV/R
 Audio	 Shift + TV/R
 Pop-Up M	 Smart
 Zoom	 Eject
 Sound	 Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0 / AV	 0

Original	Sustituto
 EPG	 Guide
 PIP/[]	 3D
 Media	 Media
 Text / Disc M	 Text
 Text / Disc M	 D. Menu
 Menu	 Menu
 End	 Back
 Info	 Info
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -





Original		Sustituto	
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue/Marker		Blue
	Play		Play
	Pause		Pause
	Stop		Stop
	Rec		Rec
	<<		<<
	>>		>>

Original	Sustituto

