





Original	Sustituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Recall	Pre Ch
Display	Info
P.Mode	Format
Text	Text
Red / PIP	Red
Green / Sub Ch	Green

Original	Sustituto
Yellow / Swap	Yellow
Blue / Main Ch	Blue
Up	Up
CH+	Ch +
Down	Down
CH-	Ch -
Right	Right
Vol+	Vol +
Left	Left
Vol-	Vol -
Menu	Menu
Menu	Ok
S.Mode	Shift + Dual
Mute	Mute
Zoom / Sub	3D
Still	Back
O)/▼/Audio / Reveal	Dual





Original	Sustituto
 Video / Index	 AV
 S-Video / Hold	 TV/R
 PC / Size	 Options
 YPbPr / Cancel	 Exit
 DM / Mix	 Subt
 Time	 Shift + AV

Original	Sustituto

