



Original	Sustituto
Open / Close	Eject / Surround
Input Select	AV / Input / RDS
HDMI	Shift + 0
Power	Power
1	1
2	2
3	3
Prog +	CH+ / Page+
4	4
5	5
6	6
Prog -	CH- / Page-
7	7
8	8
9	9
Timer Prog	Zoom / Size
Setup	Setup / OPT /

Original	Sustituto
0	0
Clear	Exit / Cancel / Clear
Info	Info / Angle
Text	Text / Goto
VCR	Shift + 4
DVD	Shift + 2
Guide	Guide / EPG / -/-
Top Menu	Shift + D.Menu / Top Menu
Up	Up
Disc Menu	D.Menu / Top
Left	Left
OK	OK
Right	Right
Display	Display / Media
Down	Down
Return	Back / Return
Red	Red / Netflix / Search





Original	Sustituto
Green	Green / APP / Repeat
Yellow / Mode	Yellow / YouTube / Repeat
Blue / Search	Blue / Prime Video / Random
<< REV	<< / Tune-
Play	Play / Slow
>> FWD	>> / Tune+
I<< Skip	I<< / Preset-
Stop	Stop / Hold
>>I Skip	>>I / Preset+
Pause	Pause / Step / Freeze
Instant Skip	Shift + Back / Return
Sat Link	TV/Radio /
Time Slip	Shift + Sleep / Timer
Dubbing	Smart / List
Rec Mode	Shift + Rec / Rec Mode
Rec	Rec / Rec Mode
Subtitle	Subtitle / EQ

Original	Sustituto
Audio	Audio / Lang I/II
Time Set	Sleep / Timer

