
 





Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV / R	 TV/Radio /
 0	 0
 Text	 Text / Goto
 Red / V-FMT	 Display / Media
 Red / V-FMT	 Red / Netflix / Search
 Green	 Green / APP / Repeat

Original	Sustituto
 Yellow	 Yellow / YouTube / Repeat
 Blue / Timer	 Blue / Prime Video / Random
 Blue / Timer	 Sleep / Timer
 Up / CH+	 Up
 Up / CH+	 CH+ / Page+
 Left / V-	 Vol-
 Left / V-	 Left
 OK	 OK
 Right / V+	 Vol+
 Right / V+	 Right
 Down / CH-	 Down
 Down / CH-	 CH- / Page-
 EPG	 Guide / EPG / -/-
 Menu	 Menu / Home
 SUB	 Subtitle / EQ
 FAV	 Fav / Marker / PC
 Back	 Back / Return





	Original	Sustituto	
	Audio	Audio / Lang I/II	
	Rec	Rec / Rec Mode	
	Stop	Stop / Hold	
	Play	Play / Slow	
	Pause	Pause / Step / Freeze	
	FRW	<< / Tune-	
	FFW	>> / Tune+	
	I<<	I<< / Preset-	
	>>I	>>I / Preset+	
	Info	Info / Angle	
	USB	+ Shift + 8	
	Option	Setup / OPT /	
	Movie	Smart / List	

Original	Sustituto

