




 





 

 



 









 




 






Original	Sustituto
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 Mode	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Nicam/A2	 Dual
 TXT / Mix	 Text
 TV / Radio	 TV/R

Original	Sustituto
 List	 List
 Back	 Back
 Menu	 Menu
 CH +	 Ch +
 CH -	 Ch -
 Vol +	 Vol +
 Vol -	 Vol -
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 FAV	 Pre Ch
 EPG	 Guide
 Info	 Info
 Exit	 Exit
 Red	 Red



