




 





 

 



 









 




 







Original	Sustituto
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 Mode	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Nicam/A2	 Dual
 TXT / Mix	 Text
 TV / Radio	 TV/R

Original	Sustituto
 List	 List
 Back	 Back
 Menu	 Menu
 CH +	 Ch +
 CH -	 Ch -
 Vol +	 Vol +
 Vol -	 Vol -
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 FAV	 Pre Ch
 EPG	 Guide
 Info	 Info
 Exit	 Exit
 Red	 Red





Original	Sustituto	Original	Sustituto
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Hold	 Stop		
 Index	 Media		
 Size	 Eject		
 Reveal	 3D		
 Subtitle	 Subt		
 Subpage	 Shift + Subt		
 Picture	 Format		
 Sound	 Shift + Dual		

Original	Sustituto

