









 



 

 



 





 





 

 




















 


 
 












Original		Sustituto		Original		Sustituto	
	Power		Power		Mute		Mute / Dimmer
	1		1		P-		CH- / Page-
	2		2		Menu/DVD		Menu / Home
	3		3		Exit/Return		Exit / Cancel / Clear
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK
	7		7		Right		Right
	8		8		Guide/Top		Guide / EPG / -/-
	9		9		Down		Down
	Recall		Back / Return		Tv/FAV/Radio/Set		TV/Radio /
	0		0		Tv/FAV/Radio/Set		Fav / Marker / PC
	Source		AV / Input / RDS		Red		Red / Netflix / Search
	Vol+		Vol+		Green		Green / APP / Repeat
	A/D/Content Menu		Smart / List		Yellow		Yellow / YouTube / Repeat
	P+		CH+ / Page+		Blue		Blue / Prime Video / Random
	Vol-		Vol-		[<>]		Picture / Format





































 








 
 
 
 























Original	Sustituto	Original	Sustituto
←[/]→	Display / Media		
[i+]/[≡i]	Info / Angle		
Text	Text / Goto		
Audio	Audio / Lang I/II		
Subtitle	Subtitle / EQ		
Eject	Eject / Surround		
O)I/II	+  Shift + Audio / Lang I/II		
Stop	Stop / Hold		
Play/[≡o]	Play / Slow		
II/II>/[▽]	Pause / Step / Freeze		
I<</[≡?]	I<< / Preset-		
<</[≡+]	<< / Tune-		
>>/[≡◇]	>> / Tune+		
>>I/[O]/[≡X]	>>I / Preset+		

Original	Sustituto





Original	Sustituto	Original	Sustituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Menu/DVD		Menu / Home
	Exit/Return		Back / Return
			Up
			Left
			OK
			Right
			Guide/Top
			Down
			Tv/FAV/Radio/Set
			[<>]
			Display / Media
			[i+]/[≐i]
			Text
			Audio
			Subtitle
			Eject
			O/I/I
			Stop
			Play/[≐o]
			Up
			Left
			OK
			Right
			D.Menu / Top
			Down
			Setup / OPT /
			Picture / Format
			Display / Media
			Info / Angle
			Text / Goto
			Audio / Lang I/II
			Subtitle / EQ
			Eject / Surround
			Shift + Audio / Lang I/II
			Stop / Hold
			Play / Slow















 



 
 
















 











 























Original	Sustituto	Original	Sustituto
II/II>/[▼]	Pause / Step / Freeze		
I<</[≡?]	I<< / Preset-		
<</[≡+]	<< / Tune-		
>>/[≡◇]	>> / Tune+		
>>I/[O]/[≡X]	>>I / Preset+		





Original	Sustituto	Original	Sustituto
 Power	 Power	 Mute	 Mute / Dimmer
 1	 1	 P-	 CH- / Page-
 2	 2	 Menu/DVD	 Menu / Home
 3	 3	 Exit/Return	 Shift + Back / Return
 4	 4	 Exit/Return	 Exit / Cancel / Clear
 5	 5	 Up	 Up
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Guide/Top	 D.Menu / Top
 Recall	 Back / Return	 Down	 Down
 0	 0	 Tv/FAV/Radio/Set	 TV/Radio /
 Source	 AV / Input / RDS	 Tv/FAV/Radio/Set	 Setup / OPT /
 Vol+	 Vol+	 Red	 Red / Netflix / Search
 A/D / Content	 Smart / List	 Green	 Green / APP / Repeat
 P+	 CH+ / Page+	 Yellow	 Yellow / YouTube / Repeat
 Vol-	 Vol-	 Blue	 Blue / Prime Video / Random





Original	Sustituto	Original	Sustituto
[ <> ]	Picture / Format		
←[ / ]→	Display / Media		
[i+]/[≡i]	Info / Angle		
Text	Text / Goto		
Audio	Audio / Lang I/II		
Subtitle	Subtitle / EQ		
Eject	Eject / Surround		
O)I/II	+  Shift + Audio / Lang I/II		
Stop	Stop / Hold		
Play/[≡o]	Play / Slow		
II/II>/[▼]	Pause / Step / Freeze		
I<</[≡?]	I<< / Preset-		
<</[≡+]	<< / Tune-		
>>/[≡◇]	>> / Tune+		
>>I/[O]/[≡X]	>>I / Preset+		

