


 
 
 





 


Original	Sustituto
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Recall	Back / Return
0	0
Source	AV / Input / RDS
Vol+	Vol+
A/D/Content Menu	Smart / List
P+	CH+ / Page+
Vol-	Vol-

Original	Sustituto
Mute	Mute / Dimmer
P-	CH- / Page-
Menu/DVD	Menu / Home
Exit/Return	Exit / Cancel / Clear
Up	Up
Left	Left
OK	OK
Right	Right
Guide/Top	Guide / EPG / -/-
Down	Down
Tv/FAV/Radio/Set	TV/Radio /
Tv/FAV/Radio/Set	Fav / Marker / PC
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[<>]	Picture / Format



































 








 
 
 
 

























Original	Sustituto	Original	Sustituto
	←[/]→		
	[i+]/[≡i]		
	Text		
	Audio		
	Subtitle		
	Eject		
	O)/I/I		
	Stop		
	Play/[≡o]		
	II/II>/[▼]		
	I<</[≡?]		
	<</[≡+]		
	>>/[≡◇]		
	>>I/[O]/[≡X]		





Original	Sustituto	Original	Sustituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Menu/DVD		Menu / Home
	Exit/Return		Back / Return
			Up
			Left
			OK
			Right
			Guide/Top
			Down
			Tv/FAV/Radio/Set
			[<>]
			Display / Media
			[i+]/[≡i]
			Text
			Audio
			Subtitle
			Eject
			O)/I/I
			Stop
			Play/[≡o]
			Up
			Left
			OK
			Right
			D.Menu / Top
			Down
			Setup / OPT /
			Picture / Format
			Display / Media
			Info / Angle
			Text / Goto
			Audio / Lang I/II
			Subtitle / EQ
			Eject / Surround
			Shift + Audio / Lang I/II
			Stop / Hold
			Play / Slow











 



 

 

 
 
 

 









 




 




















 



 








Original	Sustituto	Original	Sustituto
II/II>/[▼]	STEP-FREEZE Pause / Step / Freeze		
I<</[≡?]	PRESET- I<< / Preset-		
<</[≡+]	TUNE- << / Tune-		
>>/[≡◇]	TUNE+ >> / Tune+		
>>I/[O]/[≡X]	PRESET+ >>I / Preset+		





Original		Sustituto		Original		Sustituto	
	Power		Power		Mute		Mute / Dimmer
	1		1		P-		CH- / Page-
	2		2		Menu/DVD		Menu / Home
	3		3		Exit/Return		Shift + Back / Return
	4		4		Exit/Return		Exit / Cancel / Clear
	5		5		Up		Up
	6		6		Left		Left
	7		7		OK		OK
	8		8		Right		Right
	9		9		Guide/Top		D.Menu / Top
	Recall		Back / Return		Down		Down
	0		0		Tv/FAV/Radio/Set		TV/Radio /
	Source		AV / Input / RDS		Tv/FAV/Radio/Set		Setup / OPT /
	Vol+		Vol+		Red		Red / Netflix / Search
	A/D / Content		Smart / List		Green		Green / APP / Repeat
	P+		CH+ / Page+		Yellow		Yellow / YouTube / Repeat
	Vol-		Vol-		Blue		Blue / Prime Video / Random





Original	Sustituto	Original	Sustituto
[<>]	Picture / Format		
←[/]→	Display / Media		
[i+]/[≡i]	Info / Angle		
Text	Text / Goto		
Audio	Audio / Lang I/II		
Subtitle	Subtitle / EQ		
Eject	Eject / Surround		
O)I/II	+ Shift + Audio / Lang I/II		
Stop	Stop / Hold		
Play/[≡o]	Play / Slow		
II/II>/[▼]	Pause / Step / Freeze		
I<</[≡?]	I<< / Preset-		
<</[≡+]	<< / Tune-		
>>/[≡◇]	>> / Tune+		
>>I/[O]/[≡X]	>>I / Preset+		

