 
 

 



 
 
 
 



 
 
 
 

 
 

 
 
 

 
 
 
 

 

 
 
 

 



 







Original	Sustituto	Original	Sustituto
 Power	 Power	 <<	 <<
 Bonusview	 Media	 >>	 >>
 Open / Close	 Eject	 Stop	 Stop
 1	 1	 Play	 Play
 2	 2	 Pause	 Pause
 3	 3	 Disc Menu	 D. Menu
 4	 4	 Menu	 Menu
 5	 5	 Popup / Title	 Shift + Menu
 6	 6	 Popup / Title	 List
 7	 7	 Tools	 Options
 8	 8	 Info	 Info
 9	 9	 Up	 Up
 0	 0	 Left	 Left
 Subtitle	 Subt	 Enter	 Ok
 Audio	 Dual	 Right	 Right
  <<	  <<	 Down	 Down
 >>	 >>	 Return	 Back





Original		Sustituto		Original		Sustituto	
	Exit		Exit				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	Smart HUB		Smart				
	Search		TV/R				
	Repeat		Text				
	TV Power		Shift + Power				
	TV Source		AV				
	TV Vol +		Vol +				
	TV Vol -		Vol -				
	TV Mute		Mute				
	TV CH +		Ch +				
	TV CH -		Ch -				

