



Original	Sustituto
	Power
	+ Shift + 4
	Mute / Dimmer
	Eject / Surround
	+ Shift + 8
	TV/Radio /
	Fav / Marker / PC
	Exit / Cancel / Clear
	1
	2
	3
	4
	5
	6
	7
	8
	9

Original	Sustituto
	0
	Guide / EPG / -/-
	Text / Goto
<< button icon"/>	<< / Tune-
	Vol-
	Vol+
	I<< / Preset-
	Play / Slow
	Stop / Hold
>> button icon"/>	>> / Tune+
	Green / APP / Repeat
	Yellow / YouTube / Repeat
>>I button icon"/>	>>I / Preset+
	Menu / Home
	Up
	Setup / OPT /
	Left



