







 
 
















 











Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 Picture	 Picture / Format
 Aspect	 Shift + Picture / Format
 Sleep	 Sleep / Timer
 Sound	 Sound / Title
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0

Original	Sustituto
 Recall	 Back / Return
 Display	 Display / Media
 Up	 Up
 Input	 AV / Input / RDS
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 EPG	 Guide / EPG / -/--
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Tv/Radio	 TV/Radio /
 CH-	 CH- / Page-
 Open/Close	 Eject / Surround



