



Original	Sustituto
On	Power
Off	Shift + Power
Mute	Mute / Dimmer
AVR	AV / Input / RDS
DVD	Shift + 2
CD	Shift + 3
Tape	Shift + 5
VID1/VCR	Shift + 4
VID2/TV	Shift + 1
CBL/SAT	Shift + 0
AM/FM	Shift + 6
Sleep	Sleep / Timer
Test	TV/Radio /
Vol+	Vol+
Surr.	Eject / Surround
Night	Zoom / Size
[=]	Text / Goto

Original	Sustituto
Vol-	Vol-
CH./[=?]	Picture / Format
SPKR/Menu	Menu / Home
Up	Up
Left	Left
Set	OK
Right	Right
Digital/[≡X]	Setup / OPT /
Down	Down
Delay/Normal	Sound / Title
1	1
2	2
3	3
4	4
5	5
6	6
7	7





Original	Sustituto
8	8
Tun-M/[≡+]	Smart / List
9	9
0	0
Mem/[≡◆]	D.Menu / Top
Tuning ▲	>> / Tune+
Red	Red / Netflix / Search
Direct/Green	Green / APP / Repeat
Clear/Yellow	Yellow / YouTube / Repeat
Preset ▲	>> / Preset+
Blue	Blue / Prime Video / Random
Tuning ▼	<< / Tune-
RDS/D.Skip	Display / Media
Preset ▼	<< / Preset-
<< DVD	Shift + << /
> DVD	Shift + Play /
>> DVD	Shift + >> /

Tune+

Original	Sustituto
Stop DVD	Shift + Stop /
Pause DVD	Shift + Pause / Step /
I<</Skip Down	Shift + I<< / Preset-
Skip Up/>>	Shift + >> / Preset+

 


 

 







Original		Sustituto		Original		Sustituto	
	Power On		Power		3		3
	Power Off		Shift + Power		4		4
	Vol+		Vol+		5		5
	Night		Zoom / Size		6		6
	[=]		Text / Goto		7		7
	Vol-		Vol-		8		8
	CH./[=?]		Picture / Format		Tun-M/[≡+]		Smart / List
	SPKR/Menu		Menu / Home		9		9
	Up		Up		0		0
	Left		Left		Mem/[≡◇]		D.Menu / Top
	Set		OK		Direct		Green / APP / Repeat
	Right		Right		Clear		Exit / Cancel / Clear
	Digital/[≡X]		Setup / OPT /		Preset ▲		CH+ / Page+
	Down		Down		Preset ▲		Shift + >>1 / Preset+
	Delay/Normal		Sound / Title		RDS/D.Skip		Display / Media
	1		1		Preset ▼		CH- / Page-
	2		2		Preset ▼		Shift + I<< / Preset-





Original	Sustituto
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Stop / Hold
	 Pause / Step / Freeze
	 I<< / Preset-
	 >>I / Preset+

Original	Sustituto





Original		Sustituto		Original		Sustituto	
	Power On		Power		4 VCR		Shift + 4
	Power (On/Off)		Mute / Dimmer		5		5
	Power Off		Shift + Power		5 VCR		Shift + 5
	PR+ VCR		CH+ / Page+		6		6
	Input VCR		AV / Input / RDS		6 VCR		Shift + 6
	Vol+ VCR		Vol+		7		7
	PR- VCR		CH- / Page-		7 VCR		Shift + 7
	Vol- VCR		Vol-		8		8
	SPKR/Menu		Menu / Home		8 VCR		Shift + 8
	Delay/Normal		Sound / Title		Tun-M/[≡+]		Smart / List
	1		1		9		9
	1 VCR		Shift + 1		9 VCR		Shift + 9
	2		2		0		0
	2 VCR		Shift + 2		0 VCR		Shift + 0
	3		3		Mem/[≡♦]		D.Menu / Top
	3 VCR		Shift + 3		Direct		Green / APP / Repeat
	4		4		Clear VCR		Shift + Exit / Cancel / Clear





Original	Sustituto
Preset ▲/Blue	Blue / Prime Video / Random
RDS/D.Skip	Display / Media
<<	<< / Tune-
<< VCR	Shift + << /
Play	Play / Slow
Play VCR	Shift + Play /
>>	>> / Tune+
>> VCR	Shift + >> /
Rec VCR	Shift + Rec / Rec Mode
Stop	Stop / Hold
Stop VCR	Shift + Stop /
Pause	Pause / Step / Freeze
<<	<< / Preset-
>>	>> / Preset+

Original	Sustituto





Original	Sustituto	Original	Sustituto
	<>		Play / Slow
	>>		>> / Tune+
	<<		<< / Tune-
	Stop		Stop / Hold
	Rec		Rec / Rec Mode

