



Original	Sustituto
Standby / On	Power
BD	Shift + 5
DVD	Shift + 2
DVR / BDR	Shift + 7
HDMI	Shift + 0
TV	Shift + 1
CD	Shift + 3
NET	Shift + 9
ADPT	Shift + Guide / EPG / -/-
iPod / USB	Shift + 8
SAT / CBL	Shift + Fav / Marker / PC
MHL	Shift + 4
TUNER	Shift + 6
Input Select ↻	CH- / Page-
Input Select ↻	CH+ / Page+
i / Status	Info / Angle
Volume+	Vol+

Original	Sustituto
Volume-	Vol-
Mute	Mute / Dimmer
Audio	Audio / Lang I/II
Up	Up
Video	Picture / Format
Tools Menu	Setup / OPT /
Left	Left
Enter	OK
Right	Right
Home Menu	Menu / Home
iPod Ctrl.	D.Menu / Top
Down	Down
Return	Back / Return
Features PHASE	Red / Netflix / Search
Features ECO	Yellow / YouTube / Repeat
MPX	Shift + Pause / Step / Freeze
Pause	Pause / Step / Freeze



 



 

 



Original	Sustituto
BAND	Shift + Play /
Play	Play / Slow
PTY	Shift + Stop /
Stop	Stop / Hold
Preset -	Shift + I<< / Preset-
I<<	I<< / Preset-
Preset+	Shift + >>I / Preset+
>>I	>>I / Preset+
Tune-	Shift + << /
<<	<< / Tune-
Tune+	Shift + >> /
>>	>> / Tune+
Auto / ALC /	Subtitle / EQ
1	1
Standard	Smart / List
2	2
Adv. Surr.	Eject / Surround

Original	Sustituto
3	3
+ Favorite	Fav / Marker / PC
Audio / THX	Sound / Title
4	4
Signal Sel.	TV/Radio /
MCACC	Zoom / Size
5	5
6	6
CH. Level	Text / Goto
Disp / Auto	Display / Media
7	7
Speakers	Shift + Audio / Lang I/II
Dimmer	Shift + Mute / Dimmer
8	8
9	9
Sleep	Sleep / Timer
Repeat	Green / APP / Repeat





Original		Sustituto	
	HDMI Out		AV / Input / RDS
	0		0
	Class		Exit / Cancel / Clear
	Shuffle		Blue / Prime Video / Random

Original		Sustituto	





Original	Sustituto
Standby / On	Power
BD	Shift + 5
DVD	Shift + 2
DVR / BDR	Shift + 7
HDMI	Shift + 0
TV	Shift + 1
CD	Shift + 3
NET	Shift + 9
ADPT	Shift + Guide / EPG / -/-
iPod / USB	Shift + 8
SAT / CBL	Shift + Fav / Marker / PC
MHL	Shift + 4
TUNER	Shift + 6
Input Select ↻	CH- / Page-
Input Select ↻	CH+ / Page+
i / Status	Info / Angle
Volume+	Vol+

Original	Sustituto
Volume-	Vol-
Mute	Mute / Dimmer
Audio	Audio / Lang I/II
Up	Up
Video	Picture / Format
Tools Menu	Setup / OPT /
Left	Left
Enter	OK
Right	Right
Home Menu	Menu / Home
iPod Ctrl.	D.Menu / Top
Down	Down
Return	Back / Return
Features PHASE	Red / Netflix / Search
Features ECO	Yellow / YouTube / Repeat
MPX	Shift + Pause / Step / Freeze
Pause	Pause / Step / Freeze



 

 







Original	Sustituto
BAND	Shift + Play /
Play	Play / Slow
PTY	Shift + Stop /
Stop	Stop / Hold
Preset -	Shift + I<< / Preset-
I<<	I<< / Preset-
Preset+	Shift + >>I / Preset+
>>I	>>I / Preset+
Tune-	Shift + << /
<<	<< / Tune-
Tune+	Shift + >> /
>>	>> / Tune+
Auto / ALC /	Subtitle / EQ
1	1
Standard	Smart / List
2	2
Adv. Surr.	Eject / Surround

Original	Sustituto
3	3
+ Favorite	Fav / Marker / PC
Audio / THX	Sound / Title
4	4
Signal Sel.	TV/Radio /
MCACC	Zoom / Size
5	5
6	6
CH. Level	Text / Goto
Disp / Auto	Display / Media
7	7
Speakers	Shift + Audio / Lang I/II
Dimmer	Shift + Mute / Dimmer
8	8
9	9
Sleep	Sleep / Timer
Repeat	Green / APP / Repeat





Original		Sustituto	
	HDMI Out		AV / Input / RDS
	0		0
	Class		Exit / Cancel / Clear
	Shuffle		Blue / Prime Video / Random

Original		Sustituto	

