









 
 







 





 



 

 
 




 
 

 


 

 

 

 
 
 


 
 
 
 
 
 
 
 
 
 

 

 




Original	Sustituto	Original	Sustituto
	Power		Power
	Source		AV
	TV		TV/R
	Quick		Shift + Pre Ch
	ECO		Shift + 3D
	List		List
	Vol+		Vol +
	Vol-		Vol -
	AD		Shift + Subt
	Mute		Mute
	P+		Ch +
	P-		Ch -
	Menu		Menu
	Guide		Guide
	Exit		Exit
	Back		Back
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9





Original		Sustituto		Original		Sustituto	
	0		0		[▼]		Smart
	[i+]		Info		[▶]		Sleep
	Recall		Pre Ch		→ ◄ ←		Shift + Text
	[≡+]		Options		V.Format		Format
	[≡♦]		Shift + Format		Audio I/II		Dual
	Play		Play		More Info		Shift + Info
	<<		<<		Subtitle		Subt
	>>		>>				
	l<<		l<<				
	>>l		>>l				
	Stop		Stop				
	Rec		Rec				
	Pause/Step		Pause				
	[≡?]		D. Menu				
	[O]/[≡X]		Shift + AV				
	Text		Text				
	3D		3D				

