

 
 









Original	Sustituto
	Mute / Dimmer
	Up
	Power
	Left
	OK
	Right
	Menu / Home
	Down
	Info / Angle
	1
	2
	3
	4
	5
	6
	7
	8

Original	Sustituto
	9
	Smart / List
	0
	CH+ / Page+
	Back / Return
	Vol-
	Vol+
	CH- / Page-
	Shift + Back / Return
	TV / Radio /
	Fav / Marker / PC
	AV / Input / RDS
	Shift + CH+ /
	Red / Netflix / Search
	Green / APP / Repeat
	Shift + CH- /
	Yellow / YouTube / Repeat





Original	Sustituto	Original	Sustituto
	Blue Blue / Prime Video / Random		
	Screen Picture / Format		
	Lang Audio / Lang I/II		
	Subtitle Subtitle / EQ		
	Sleep Sleep / Timer		
	[ ≡ ] Text / Goto		
	[ ≡ X ] Exit / Cancel / Clear		
	EPG Guide / EPG / -/--		
	[ ■ ] [ ■ ■ ] Display / Media		

