


 
 

 
 

 
 

 




Original	Sustituto
 Power	 Power
 Input TV	 Red
 Input DVD/BD	 Green
 Input SAT	 Yellow
 Input AUDIO	 Blue
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Enter	 Pre Ch

Original	Sustituto
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Return	 Back
 Options	 Options
 I<<	 I<<
 ←	 Shift + I<<
 →	 Shift + I>>
 I>>	 I>>
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Sound Field	 Dual

 

 

 



 
 






 



 

 
 
 









 


 

 

 
 
 


 




 



 


 
 












Original	Sustituto	Original	Sustituto
 Mute	 Mute		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Sleep	 Sleep		
 Night	 Smart		
 AMP Menu	 Menu		







 
 




 

 


 




Original	Sustituto	Original	Sustituto
 TV Power	 Power	 Hold	 Shift + Stop
 Input	 AV	 Red	 Red
 1	 1	 Green	 Green
 2	 2	 Yellow	 Yellow
 3	 3	 Blue	 Blue
 4	 4	 Guide	 Guide
 5	 5	 i+	 Info
 6	 6	 Up	 Up
 7	 7	 Left	 Left
 8	 8	 OK	 Ok
 9	 9	 Right	 Right
 0	 0	 Down	 Down
 Text	 Text	 Return	 Back
 Recall	 Pre Ch	 Menu	 Menu
 Analog	 Shift + TV/R	 Tools	 Options
 Digital	 TV/R	 << / < / <	 <<
 Aspect	 Format	 Play	 Play



 


 


 

 









 




 
 









 
 
 





 










 



 


 


Original	Sustituto	Original	Sustituto
 >> / > / >	 >>		
 Pause	 Pause		
 Stop	 Stop		
 Mute	 Mute		
 Vol +	 Vol +		
 Vol -	 Vol -		
 Prog +	 Ch +		
 Prog -	 Ch -		
 Rec	 Rec		





Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 [i+]/[?]	 Info
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right

Original	Sustituto
 Down	 Down
 Return	 Back
 I<<	 I<<
 >>I	 >>I
 <<	 <<
 Play	 Play
 >>	 >>
 Pause	 Pause
 Stop	 Stop
 Prog+	 Ch +
 Prog-	 Ch -
 Rec	 Rec
 DVD Top Menu	 Menu
 DVD Menu	 D. Menu





Original	Sustituto
AV Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide
Enter	Pre Ch
Display	Info
Up	Up
Left	Left
OK	Ok

Original	Sustituto
Right	Right
Down	Down
Return	Exit
Menu	Menu
Pr+	Ch +
Pr-	Ch -

