 


Original	Sustituto
TV Direct	TV/Radio /
Power Audio	Audio / Lang I/II
Power DVR/DVD	OK
Power VCR	Shift + Power
Power STB	Power
Power TV	Shift + OK
DVR/DVD	Fav / Marker / PC
VCR	Shift + Guide / EPG / -/-
TV	Shift + TV/Radio / Program
FM/AM	Smart / List
Video	Shift + Red / Netflix /
Tv/Video	Red / Netflix / Search
Muting	Mute / Dimmer
Channel+	CH+ / Page+
Vol+	Vol+
Channel-	CH- / Page-
Vol-	Vol-

Original	Sustituto
Play VCR	Play / Slow
<< VCR	<< / Tune-
Stop/Memory	Stop / Hold
Pause VCR	Pause / Step / Freeze
>> VCR	>> / Tune+
Smart Surround/Setup	Setup / OPT /
Display/On	Display / Media
1 VCR	Shift + 1
1 STB	1
AD Input	AV / Input / RDS
2 VCR	Shift + 2
2 STB	2
Decode	Shift + D.Menu / Top Menu
3 VCR	Shift + 3
3 STB	3
4 VCR	Shift + 4
4 STB	4

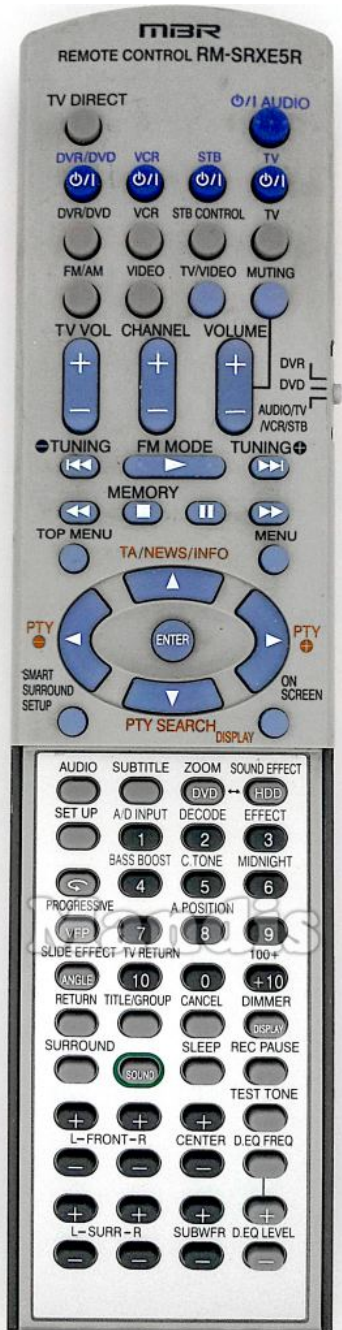 




Original	Sustituto
BASS BOOST 4	Bass Boost SHIFT + LANG III / AUDIO Shift + Audio / Lang I/II
C.TONE 5	5 VCR SHIFT + TAPE 5 Shift + 5
C.TONE 5	5 STB TAPE 5 5
C.TONE 5	C. Tone TITLE SOUND Sound / Title
MIDNIGHT 6	6 VCR SHIFT + TUNER 6 Shift + 6
MIDNIGHT 6	6 STB TUNER 6 6
MIDNIGHT 6	Midnight SHIFT + LIST SMART Shift + Smart / List
7	7 VCR SHIFT + AUX - HDD 7 Shift + 7
7	7 STB AUX - HDD 7 7
A.POSITION 8	8 VCR SHIFT + USB 8 Shift + 8
A.POSITION 8	8 STB USB 8 8
A.POSITION 8	A. Position YouTube REPEAT A-B Yellow / YouTube / Repeat
9	9 VCR SHIFT + BLUETOOTH 9 Shift + 9
9	9 STB BLUETOOTH 9 9
SLIDE EFFECT ANGLE	Effect TOP MENU D.MENU D.Menu / Top
0	0 VCR SHIFT + HDMI - BAT 0 Shift + 0
0	0 STB HDMI - BAT 0 0

Original	Sustituto
100+ +10	+10 TV GUIDE EPG Guide / EPG / -/-
DIMMER DISPLAY	Display/Dimmer SHIFT + MEDIA DISPLAY Shift + Display / Media
SURROUND	Surround SURROUND Eject / Surround
SLEEP	Sleep TIMER SLEEP Sleep / Timer
REC PAUSE	Rec Pause REC MODE Rec / Rec Mode
L-FRONT	Front L+ Up
FRONT-R	Front R+ SHIFT + Up Shift + Up
CENTER	Center+ SHIFT + TUNE+ Shift + >> /
TEST TONE	Test Tone GOTO TEXT Text / Goto
L-FRONT	Front L- Down
FRONT-R	Front R- SHIFT + Down Shift + Down
CENTER	Center- SHIFT + TUNE- Shift + << /
D.EQ.FREQ	D.EQ.Freq FORMAT PICTURE Picture / Format
L-SURR	Surr L+ SHIFT + Right Shift + Right
SURR-R	Surr R+ Right
SUBWFR	Subwfr+ SHIFT + CH PAGE Shift + CH+ /
D.EQ.LEVEL	D.EQ.Level+ SHIFT + VOL Shift + Vol+



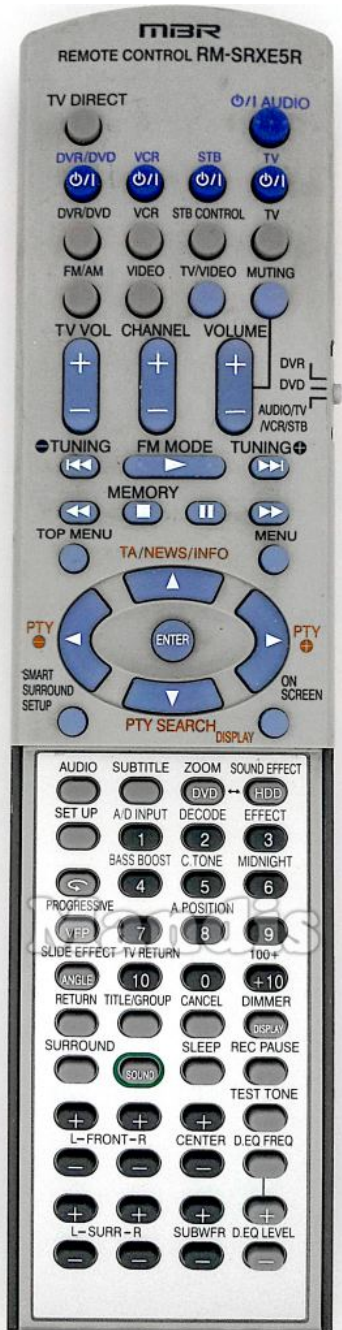









Original	Sustituto
Power Audio	+ Shift + Power
Power Tv	Power
FM/AM	Eject / Surround
Tv Vol+	Vol+
Channel+ TV	CH+ / Page+
Tv Vol-	Vol-
Channel- TV	CH- / Page-
I<</Tuning-	I<< / Preset-
FM Mode FM/AM	+ Shift + TV/Radio / Program
>>I/Tuning+	>>I / Preset+
Memory FM/AM	+ Shift + Smart / List
TA/News/Info	Smart / List
PTY- FM/AM	TV/Radio /
PTY+ FM/AM	Guide / EPG / -/-
PTY Search	Red / Netflix / Search
Display FM/AM	Display / Media
1 FM/AM	+ Shift + 1

Original	Sustituto
1 TV	1
2 FM/AM	+ Shift + 2
2 TV	2
3 FM/AM	+ Shift + 3
3 TV	3
4 FM/AM	+ Shift + 4
4 TV	4
5 FM/AM	+ Shift + 5
5 TV	5
6 FM/AM	+ Shift + 6
6 TV	6
7 FM/AM	+ Shift + 7
7 TV	7
8 FM/AM	+ Shift + 8
8 TV	8
9 FM/AM	+ Shift + 9
9 TV	9

 




Original	Sustituto
TV RETURN 10 FM/AM	 +  Shift + Fav / Marker / PC
TV RETURN 10/Tv Return TV	 +  Shift + 0
0 TV	 0
100+ +10/100+	 +  Shift + Guide / EPG / -/-
100+ +10 TV	 Fav / Marker / PC

Original	Sustituto



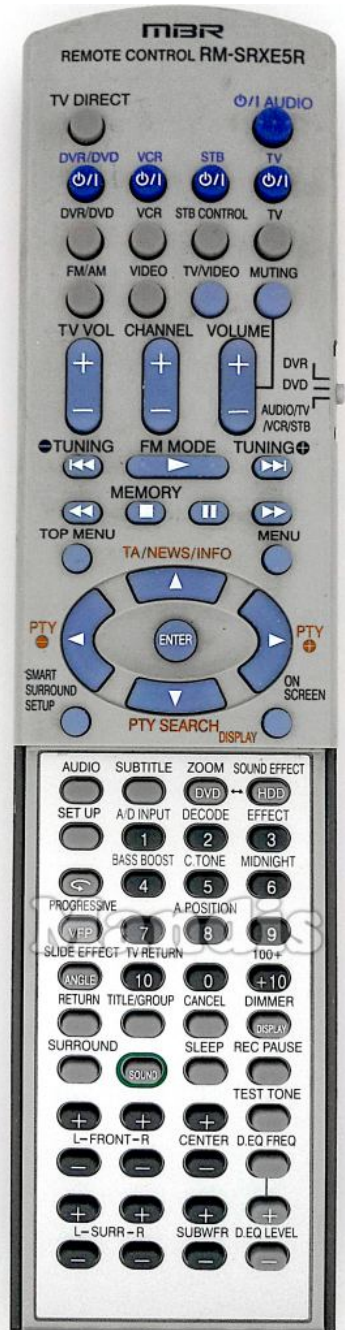

Original	Sustituto
Power DVD	Power
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Shift + Left
Enter	OK
Right	Right
Down	Down
On Screen	Shift + Display / Media
Audio	Audio / Lang I/II

Original	Sustituto
Subtitle	Subtitle / EQ
DVD Zoom	Zoom / Size
HDD Sound Effect	Sound / Title
Set Up	Setup / OPT /
1	1
2	2
3	3
←	Left
4	4
5	5
6	6
VFP Progressive	Smart / List
7	7
8	8
9	9
Angle/Slide Effect	Info / Angle
10	Guide / EPG / -/-

 




Original	Sustituto

Original	Sustituto



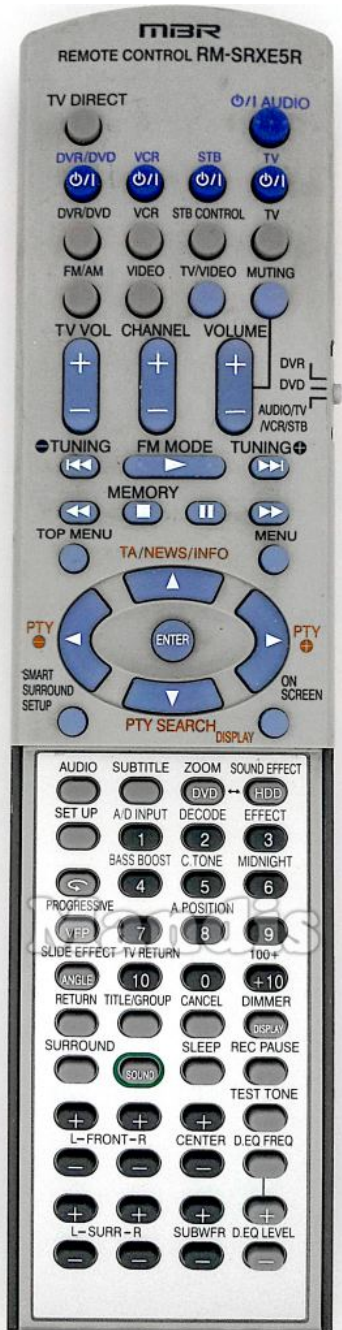

Original	Sustituto
Power	Power
Channel+	CH+ / Page+
Channel-	CH- / Page-
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Top Menu	D.Menu / Top
Up	Up
Menu	Menu / Home
Left	Shift + Left
Enter	OK
Right	Right
Down	Down

Original	Sustituto
On Screen	Shift + Display / Media
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
DVD Zoom	Zoom / Size
HDD Sound Effect	Sound / Title
Set Up	Setup / OPT /
1	1
2	2
3	3
4	4
5	5
6	6
VFP Progressive	Smart / List
7	7
8	8
9	9



