



Original	Sustituto	Original	Sustituto
	Power		Power
	[i+]		Info
	DTT/TV		TV/R
	AV1		Shift + 1
	AV2		Shift + 2
	AV3		Shift + 3
	AV4		Shift + 4
	AV5		Shift + 5
	RGB1		Shift + 7
	RGB2		Shift + 8
	Menu		Menu
	Back		Back
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	♪ / S.Mode		Shift + Dual
	⦿ / P.Mode		Shift + Format
	Vol+		Vol +
	Vol-		Vol -
	I/II		Dual
	Mute		Mute
	P+		Ch +
	P-		Ch -
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9



 

 
 
 
 
 

 




 


 


 

 
 
 
 

 












	Original	Sustituto	Original	Sustituto
	Power	Power		
	OK	Ok		
	Up	Up		
	Down	Down		
	Right	Right		
	Left	Left		
	Menu	Menu		
	Play	Play		
	Stop	Stop		
	Pause	Pause		
	<<	<<		
	>>	>>		
	P+	Ch +		
	P-	Ch -		





	Original	Sustituto	Original	Sustituto
	Power	 Power		8
	OK	 Ok		9
	Up	 Up		0
	Down	 Down		
	Right	 Right		
	Left	 Left		
	P+	 Ch +		
	P-	 Ch -		
	Vol+	 Vol +		
	Vol-	 Vol -		
	1	 1		
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		

