 


 
 
 



 

 

 










 
 
 
 
 



 
 

 
 
 


Original	Sustituto
 Power	 Power
 Power AMP	 Shift + Power
 CD	 Red
 Recorder	 Green
 Network	 Yellow
 Phono	 Blue
 AUX	 Smart
 Tuner	 Media
 Internet Radio Preset 1	 Shift + 1
 Internet Radio Preset 2	 Shift + 2
 Internet Radio Preset 3	 Shift + 3
 Play	 Play
 Pause	 Pause
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 <<	 <<

Original	Sustituto
 >>	 >>
 Preset+	 Ch +
 Preset-	 Ch -
 Pure Direct/Favorite	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Info	 Info
 Mode	 Format
 Source	 AV
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 1	 1






Original	Sustituto	Original	Sustituto
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	+10		Guide
	Clear		Exit
	Random		Options
	Repeat		Text
	Search/Program		Sleep
	Dimmer		Dual

Original	Sustituto





Original	Sustituto
 Power	 Power
 Power AMP	 Shift + Power
 CD	 Red
 Recorder	 Green
 Network	 Yellow
 Phono	 Blue
 AUX	 Smart
 Tuner	 Media
 Play	 Play
 Pause	 Pause
 I<<	 I<<
 >>I	 >>I
 Stop	 Stop
 <<	 <<
 >>	 >>
 Preset+	 Ch +
 Preset-	 Ch -

Original	Sustituto
 Pure Direct/Favorite	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Info	 Info
 Mode	 Format
 Source	 AV
 Menu	 Menu
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 1	 1
 2	 2
 3	 3
 4	 4



